


Horizontal drilling with the System-Workshop SWISSREX

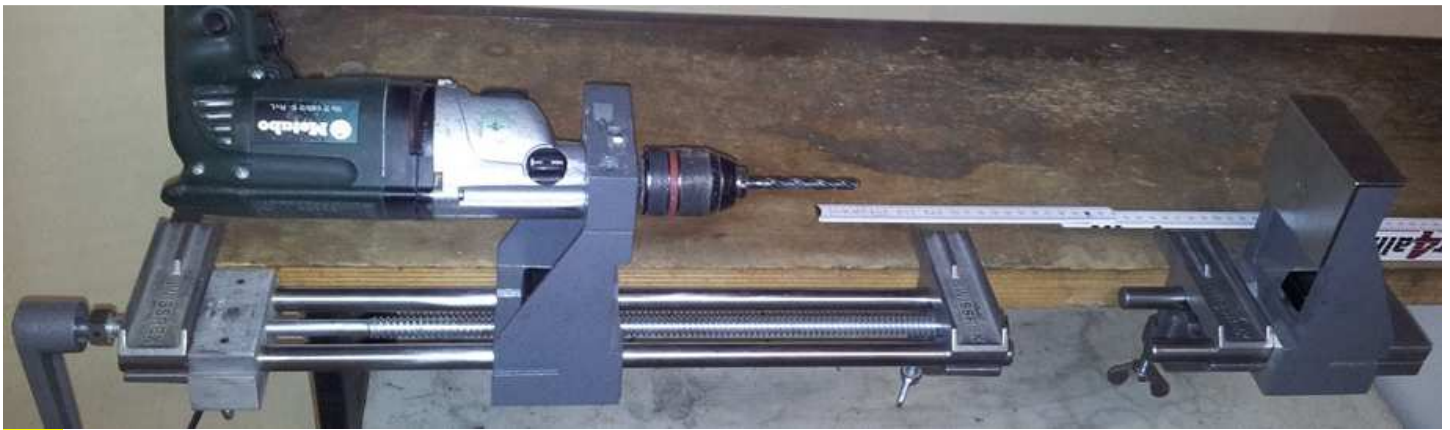

With the extension, you can do horizontal drilling of any length! If you use the crank, you have 4mm advance each turn!



Without the extension, max. working length ~ 14 cm (clamps outside), or about 19 – 20 cm, if you put the clamp inside.

Special use / accessories:

(accessory art.-no # 936 000)

You can make your own adapters in wood or in metal, for any special use – it's easier if you use our universal adapter.



It's delivered like this. Fix it on a (wooden) plate, to avoid that it turns you make an additional hole, and fix it into a jaw.

If you like to work bigger distances without using the extension, use the longer bars (accessory art.-no # 951 000 XXL).

